

DROP/RISE LENGTH

To determine if you need a 4" or 8" drop/rise, please do the following:

- A.** With your trailer level, measure from the ground to the bottom of the trailer coupler.
- B.** Now measure from the ground to the top of your receiver (top of 2" square tube) -see illustration below.


The **difference** between the first and second measurements will tell you what size drop you will need (below).

If the difference is **4" or less**, then the 4" drop will work for your set up (in drop or rise position)

If the difference is **between 4" and 8"**, then the 8" drop will work for your set up (in drop or rise position)

If the difference is **greater than 8"**, then you may need a custom shank for your set up (call us)

*NOTE: Subtract an extra 1/2" from the measured **difference** if your trailer tongue load is greater than 600 lbs.*

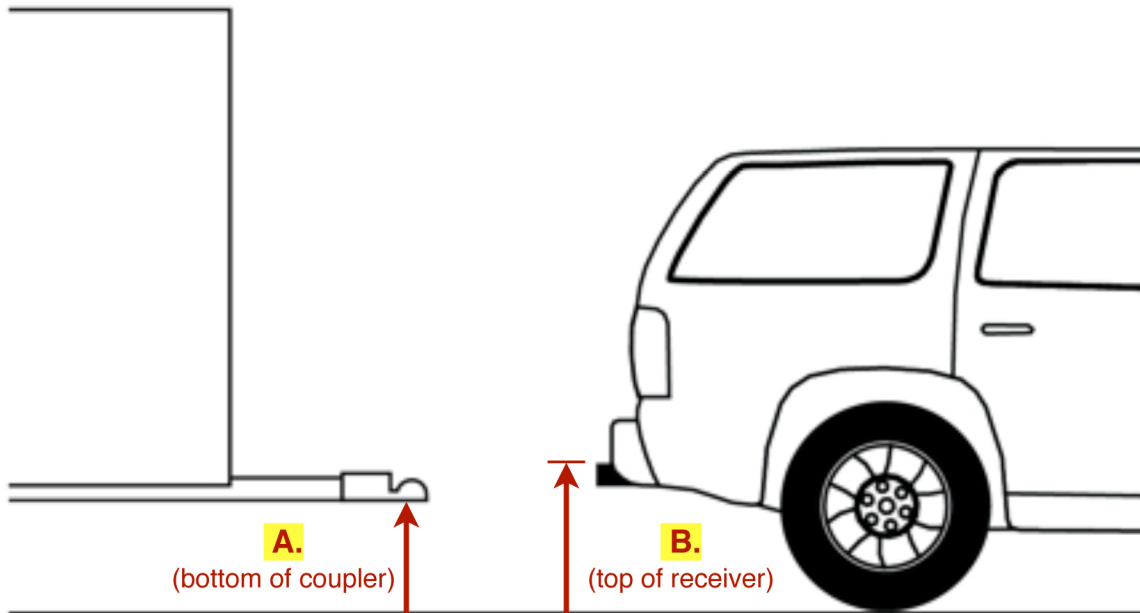

(See following page to determine the bracket size you need.)